

Set up your box in 6 easy steps.

Take your time. Do **one step at a time**, and look at the picture.
Your screen will look just like it.



BEFORE YOU START

- ☐ The box is plugged into the TV
HDMI cable + power cable.
- ☐ The TV is on, on the right HDMI input
Use your TV remote to pick it.
- ☐ The 2 batteries are in the gold remote
- ☐ Your Wi-Fi **name** and **password** are
near you
Look for the sticker under or behind your
internet box.

1

Connect the
remote

2

Open Settings

3

Network

4

Pick your Wi-Fi

5

Type the
password

6


Done!



BEFORE YOU START

Meet your remote

For the whole setup, you only need **these 5 buttons**.

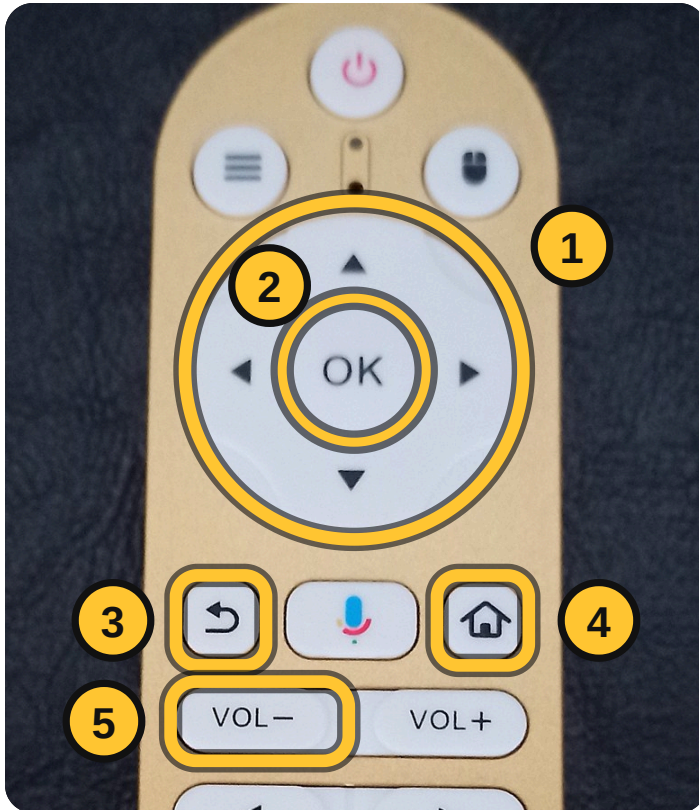

- 1 The arrows**    
Move on the screen: up, down, left, right.
- 2 OK — in the middle**
Says “yes, this one.”
- 3 Back** 
Oops? Go back one screen.
- 4 Home** 
Go back to the main screen.
- 5 VOL –**
Sound down. You need it right away, in step 1.




How to press a button: press it **once**, gently, and let go. Then wait a second: the TV needs a moment to move. Nothing happens? Press once more. **Only in step 1** will you hold 2 buttons together.

1

STEP 1

Connect the remote to the box

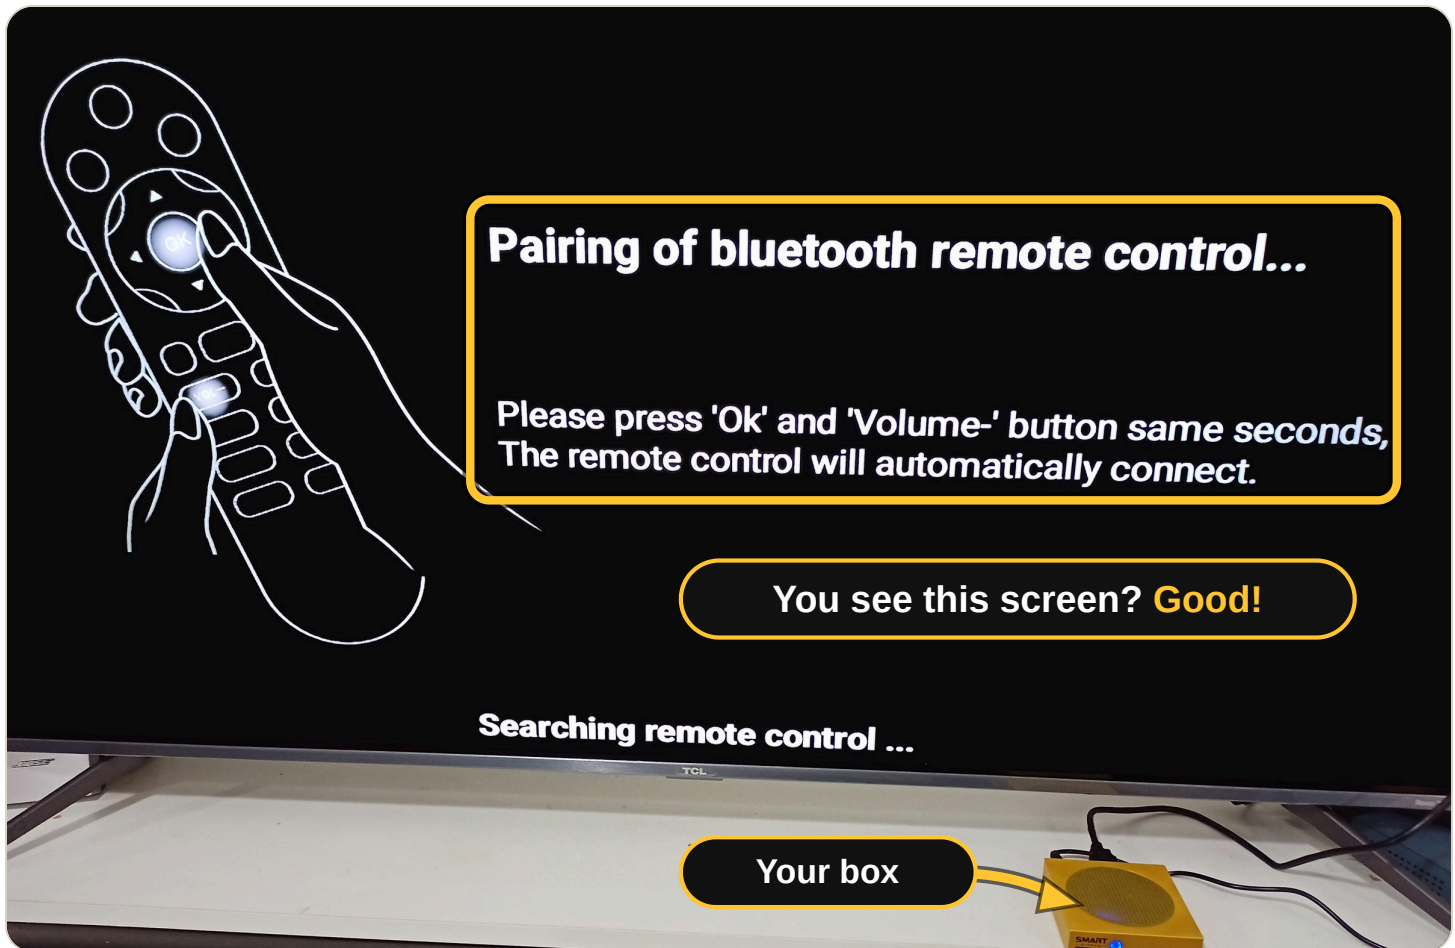

Press A and B together

- 1 Put your thumb on **OK** (A) and another finger on **VOL -** (B).
- 2 Press **both at the same time** (not one, then the other) and **hold them down**.
- 3 Let go when this screen goes away by itself. Your remote is now connected!




Nothing happens? Hold the remote close to the box and try again. Check the batteries too.

2

STEP 2

Open Settings (the gear)

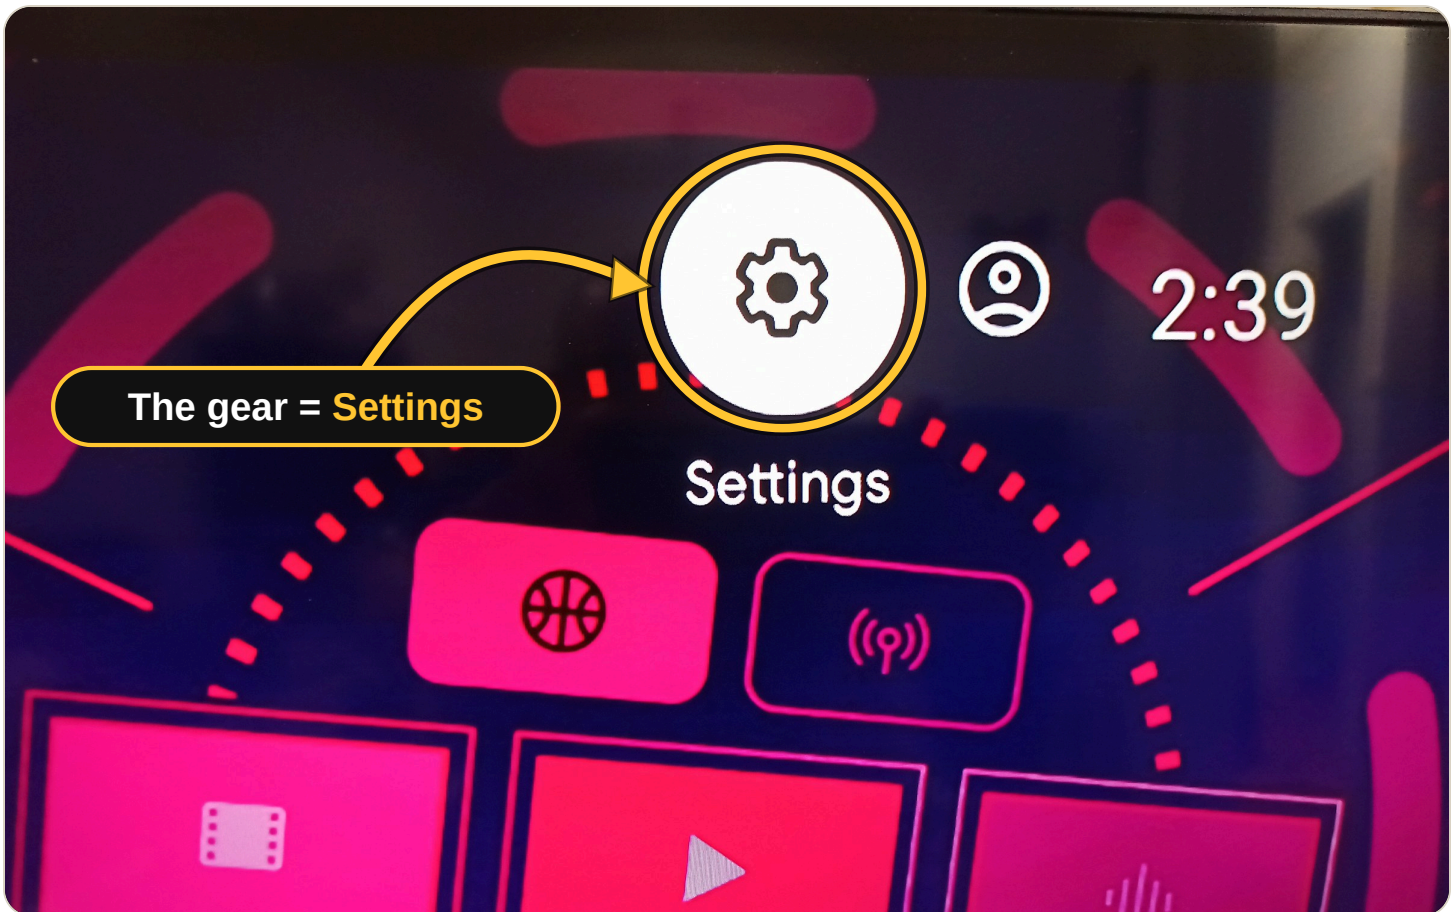

The gear is at the top of the main screen, next to the clock. It turns white when you are on it.



▲ up · ► right · OK

- 1 Press ▲ a few times, until you are at the **top** of the screen.
- 2 Press ► until the **gear** turns white.
- 3 Press OK . A blue menu opens on the right.




Is your TV box plugged into your internet box with an internet cable? Then you are already connected: go to **page 8**.

3

STEP 3

Choose “Network & Internet”

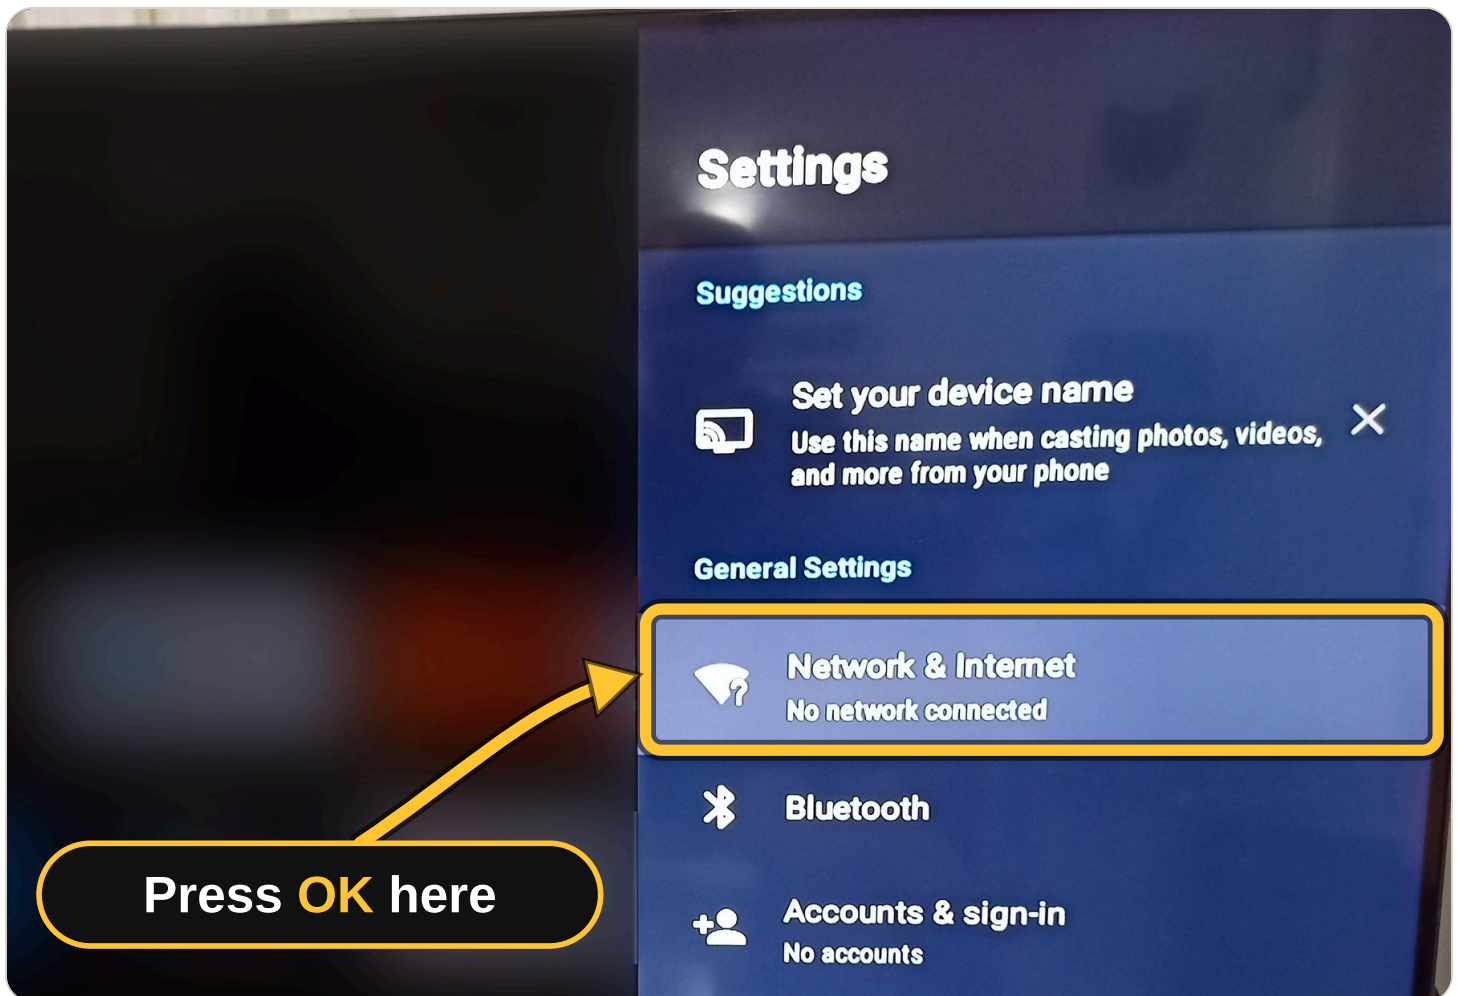

▼ down · OK

- 1 Press ▼ until **Network & Internet** is light blue, like in the picture.
- 2 Press OK .



It says “No network connected”? That is normal. We fix it now.

4

STEP 4

Pick your Wi-Fi



▼ down · OK

- 1 Find **your** Wi-Fi name in the list. It is the name on the sticker of your internet box.
- 2 Press ▼ to go on it, then press OK .




Can't find your Wi-Fi name? Try these, one at a time: **1** Look at the sticker on your internet box: your Wi-Fi name is written there. **2** The list can be long: press ▼ again and again, or go to "See all." **3** Wait one minute: the list changes by itself. **4** Move the TV box closer to your internet box, if you can. **5** Unplug your internet box, count to 30, plug it back in, wait 2 or 3 minutes, then look again. **6** Still nothing? Call Randy.

5

STEP 5

Type your Wi-Fi password

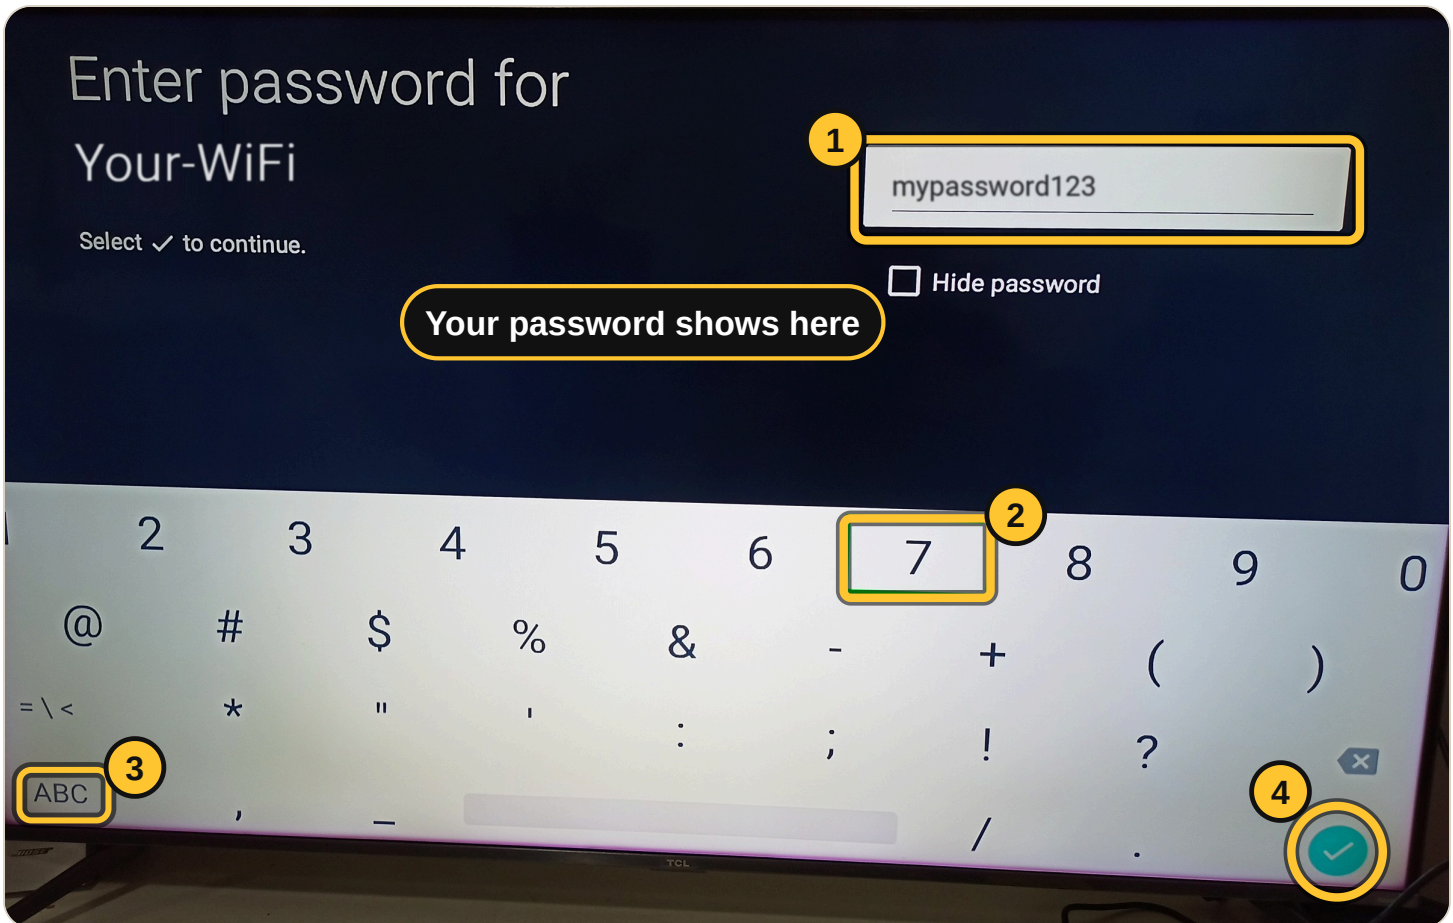


- 1 A keyboard opens. Use the arrows     to go to a letter, then press . The letter appears in box 1.
- 2 Do it again for each letter (2), slowly. Need letters instead of numbers? Go to **ABC** (3) and press .
- 3 When the password is all typed, go to the **green check ✓** (4) at the bottom right and press .

 **Capital letters count!** “A” and “a” are not the same. Copy the password **exactly** like on the sticker. Made a mistake? The  key erases one letter.



STEP 6

You did it!

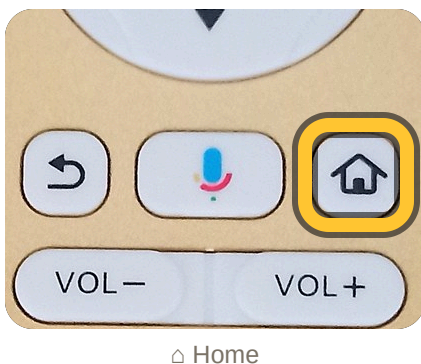

- 1 Under your Wi-Fi name, you read **“Connected.”** Your box is on the internet.
- 2 Press  **Home** to go to the main screen.
- 3 **To watch something:** choose an app in the list on the main screen. Move to it with the arrows, then press  . Enjoy your shows!



You only do this **one time**. Next time, just turn on the TV: the box remembers your remote and your Wi-Fi.

Stuck on a step? No problem. Call or text Randy:

(607) 343-3537