Set up your box in 6 easy steps.

Take your time. Do **one step at a time**, and look at the picture. Your screen will look just like it.



BEFORE YOU START


- [ ] The box is plugged into the TV
  HDMI cable + power cable.
- [ ] The TV is on, on the right HDMI input
  Use your TV remote to pick it.
- [ ] The 2 batteries are in the gold remote
- [ ] Your Wi-Fi **name** and **password** are near you
  Look for the sticker under or behind your internet box.

1	2	3	4	5	6
Connect the remote	Open Settings	Network	Pick your Wi-Fi	Type the password	Done!

BEFORE YOU START

Meet your remote

For the whole setup, you only need **these 5 buttons**.

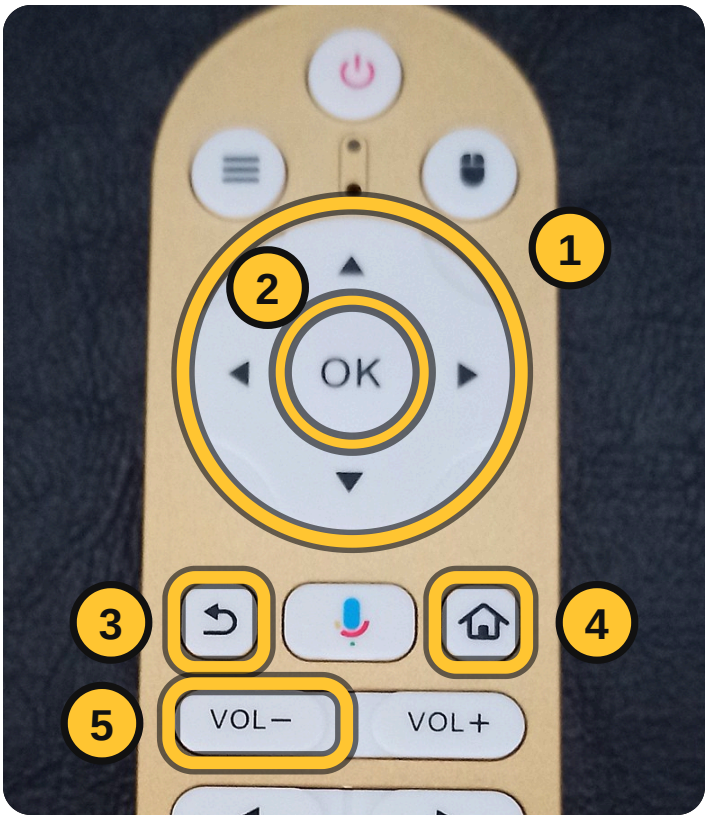


1. **The arrows** ▲ ▼ ◀ ▶
   Move on the screen: up, down, left, right.
2. **OK** — in the middle
   Says “yes, this one.”
3. **Back** ↩
   Oops? Go back one screen.
4. **Home** ⌂
   Go back to the main screen.
5. **VOL −**
   Sound down. You need it right away, in step 1.

How to press a button: press it **once**, gently, and let go. Then wait a second: the TV needs a moment to move. Nothing happens? Press once more. **Only in step 1** will you hold 2 buttons together.

STEP 1

1 Connect the remote to the box

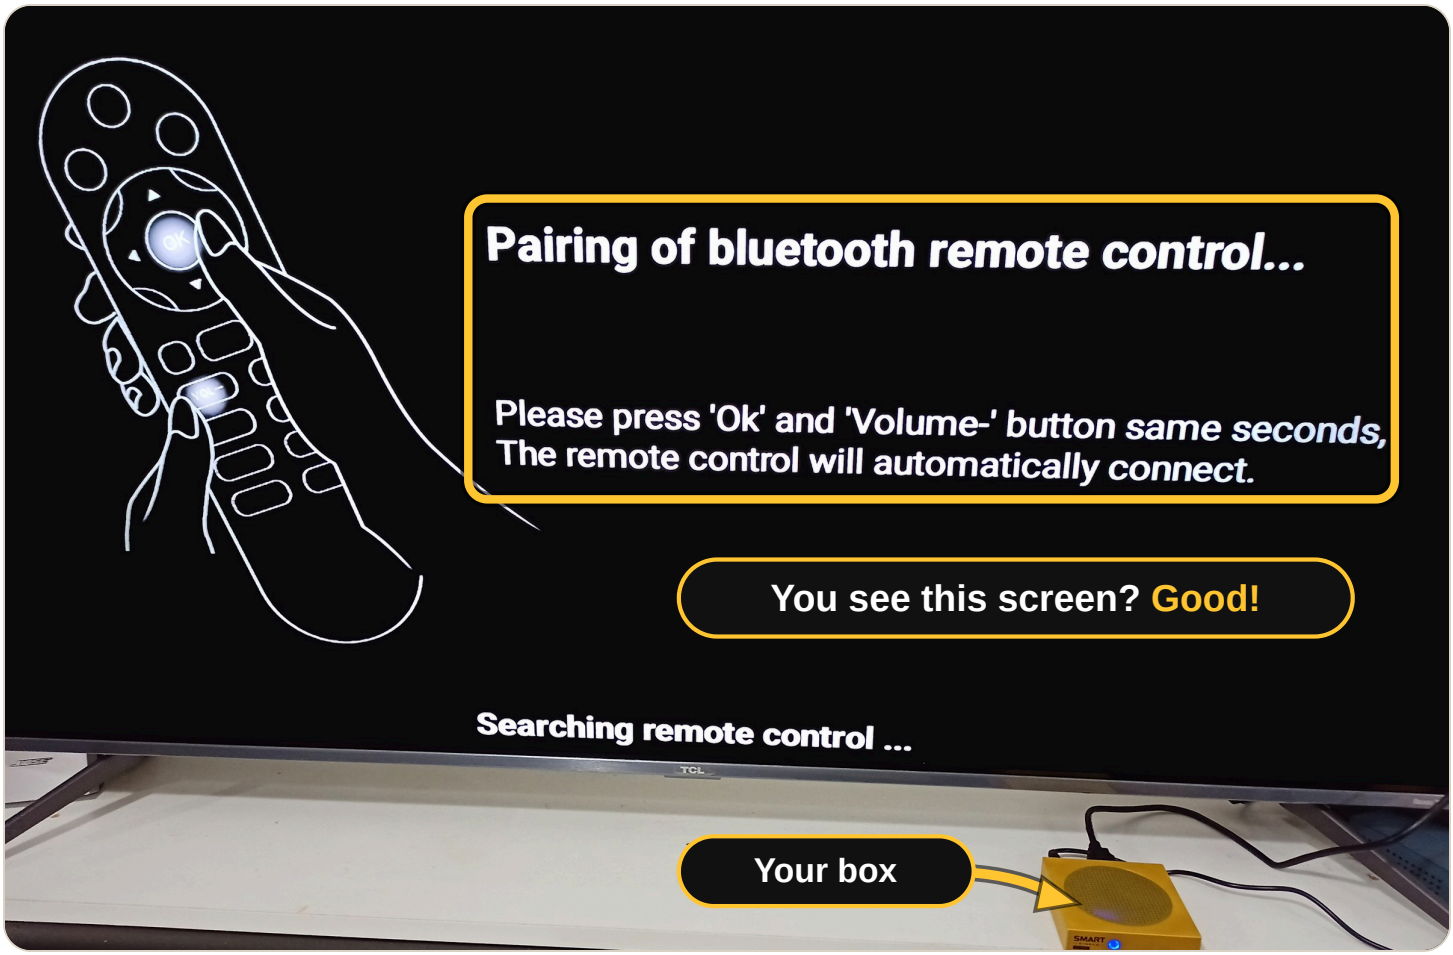




Press **A** and **B** together

1. Put your thumb on **OK** **(A)** and another finger on **VOL –** **(B)**.
2. Press **both at the same time** (not one, then the other) and **hold them down**.
3. Let go when this screen goes away by itself. Your remote is now connected!

Nothing happens? Hold the remote close to the box and try again. Check the batteries too.

STEP 2

2 Open Settings (the gear)

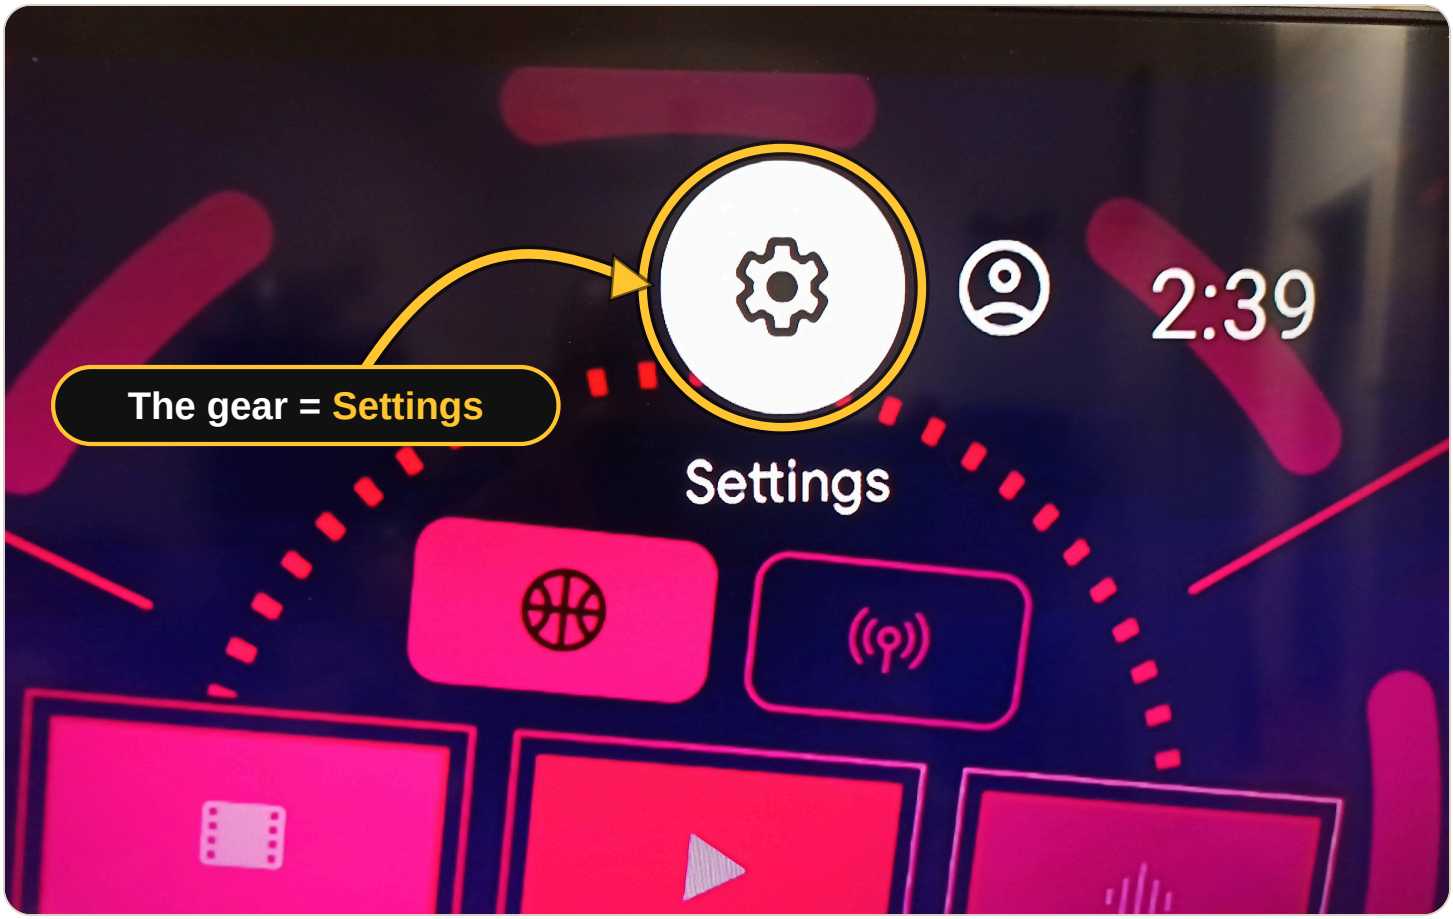

The gear is at the top of the main screen, next to the clock. It turns white when you are on it.




▲ up · ▶ right · OK

1. Press ▲ a few times, until you are at the **top** of the screen.
2. Press ▶ until the **gear** turns white.
3. Press **OK**. A blue menu opens on the right.

ⓘ Is your TV box plugged into your internet box with an internet cable? Then you are already connected: go to **page 8**.

STEP 3

Choose “Network & Internet”

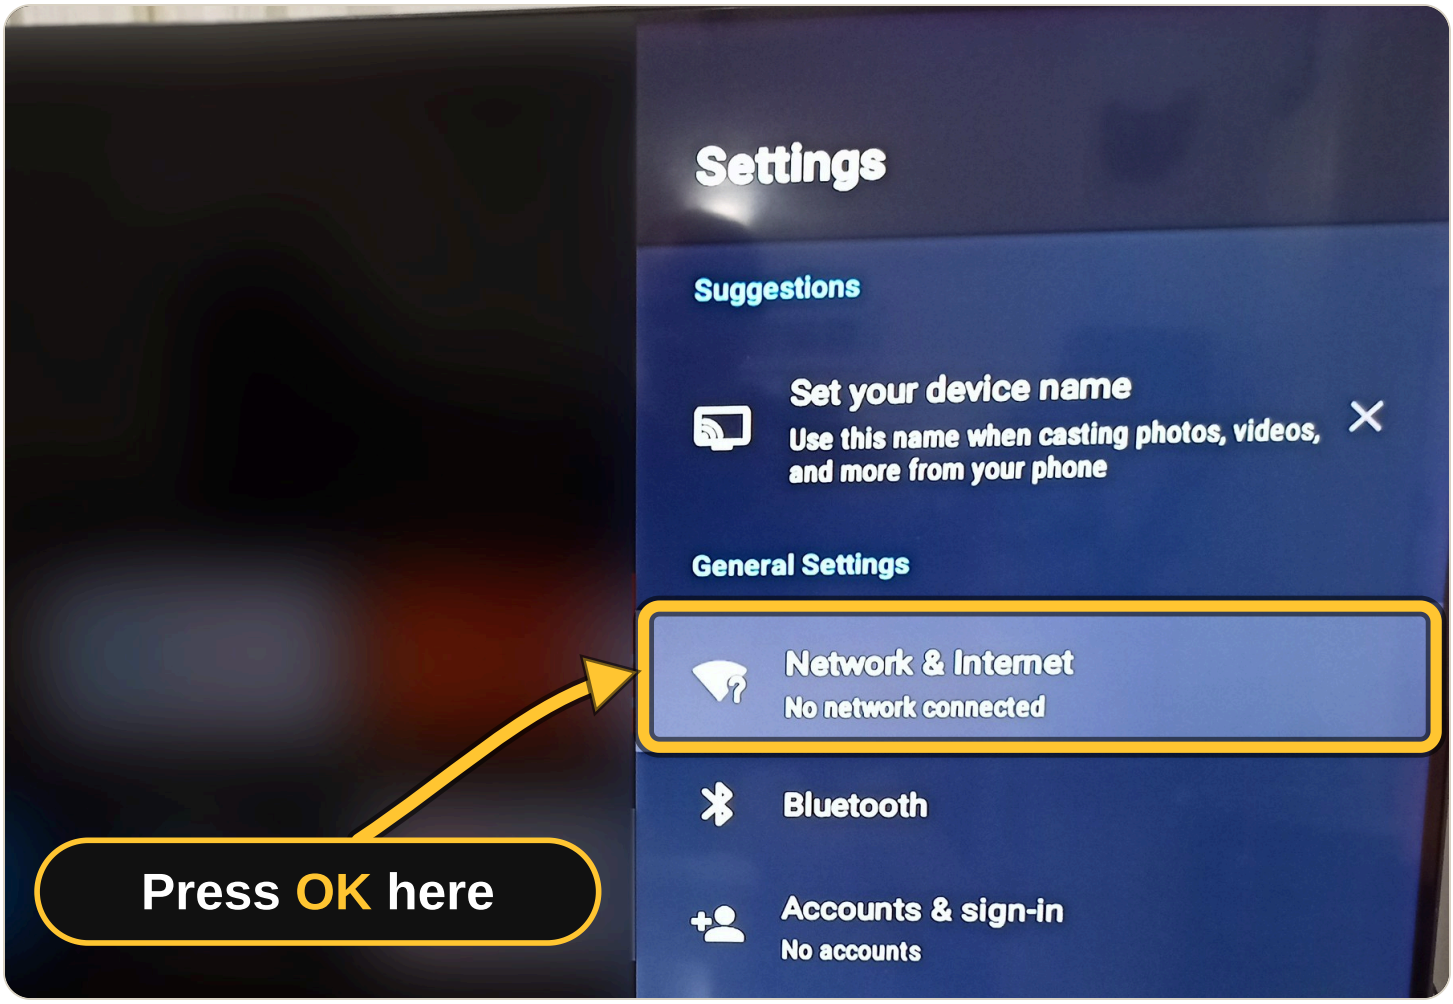



▼ down · OK

1. Press ▼ until **Network & Internet** is light blue, like in the picture.
2. Press **OK**.

i It says **“No network connected”**? That is normal. We fix it now.

STEP 4

4 Pick your Wi-Fi






▼ down · OK

1. Find **your** Wi-Fi name in the list. It is the name on the sticker of your internet box.
2. Press ▼ to go on it, then press **OK**.

Can't find your Wi-Fi name? Try these, one at a time: **1** Look at the sticker on your internet box: your Wi-Fi name is written there. **2** The list can be long: press ▼ again and again, or go to “See all.” **3** Wait one minute: the list changes by itself. **4** Move the TV box closer to your internet box, if you can. **5** Unplug your internet box, count to 30, plug it back in, wait 2 or 3 minutes, then look again. **6** Still nothing? Call Randy.

STEP 5

5 Type your Wi-Fi password

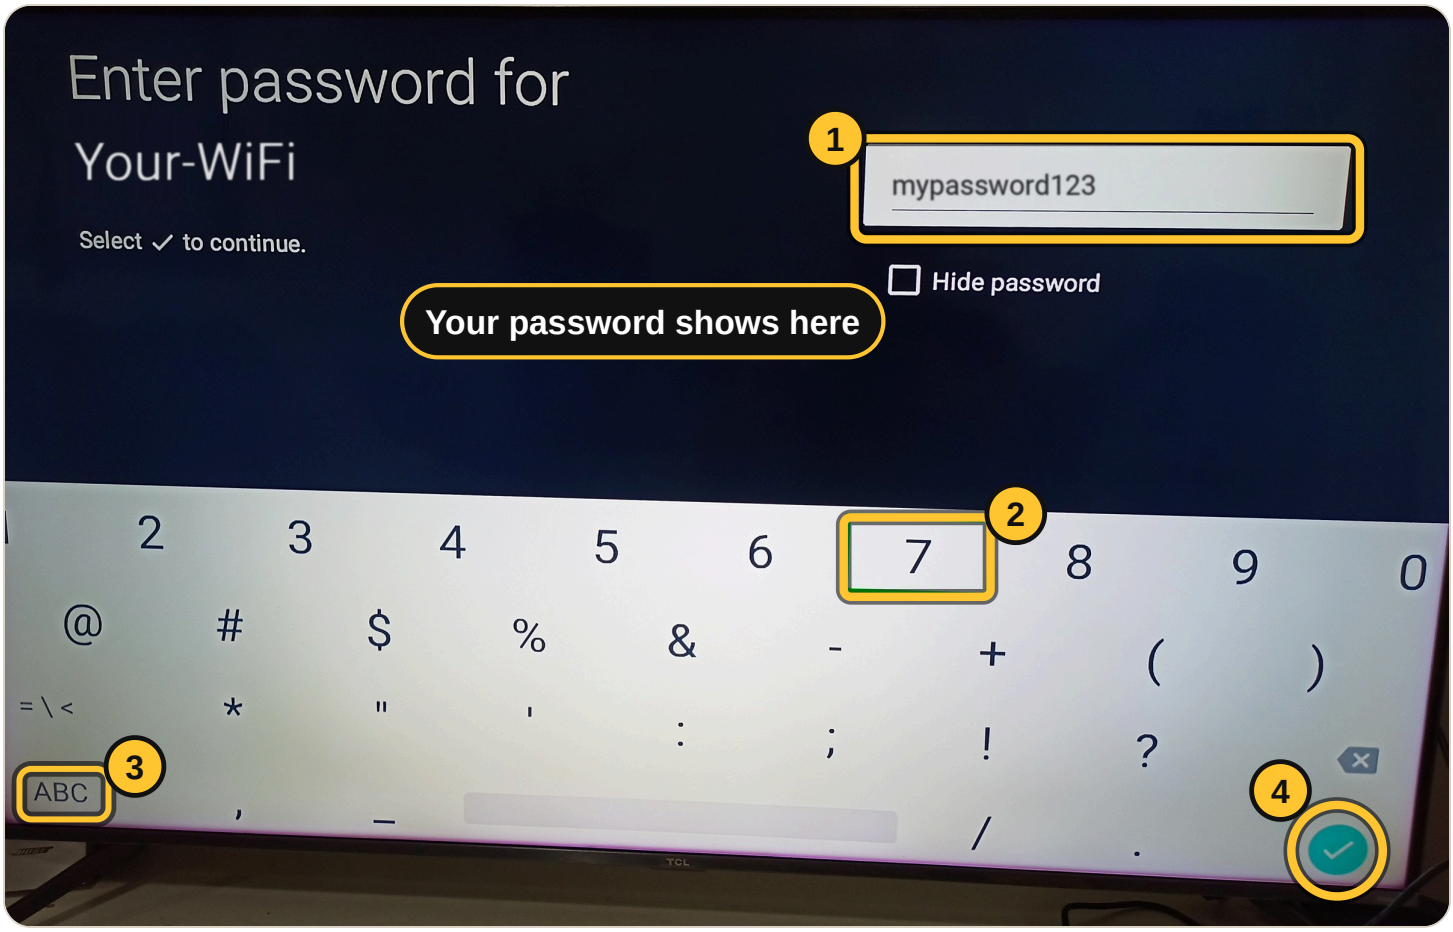


1. A keyboard opens. Use the arrows ▲ ▼ ◀ ▶ to go to a letter, then press **OK**. The letter appears in box **1**.
2. Do it again for each letter **(2)**, slowly. Need letters instead of numbers? Go to **ABC (3)** and press **OK**.
3. When the password is all typed, go to the **green check ✓ (4)** at the bottom right and press **OK**.

Capital letters count! “A” and “a” are not the same. Copy the password **exactly** like on the sticker. Made a mistake? The ⌫ key erases one letter.

STEP 6

You did it!



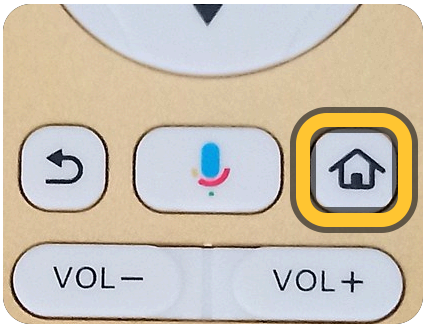

⌂ Home

1. Under your Wi-Fi name, you read **“Connected.”** Your box is on the internet.
2. Press ⌂ **Home** to go to the main screen.
3. **To watch something:** choose an app in the list on the main screen. Move to it with the arrows, then press **OK**. Enjoy your shows!

✓ You only do this **one time**. Next time, just turn on the TV: the box remembers your remote and your Wi-Fi.

Stuck on a step? No problem. Call or text Randy:

(516) 842-9767